

SET-UP INSTRUCTIONS BUFFALO MESA



Set Up Instructions

IF UNIT IS EQUIPPED WITH A TONGUE JACK DISREGARD STEP NO. 1 AND BEGIN AS FOLLOWS:

- (A) Pivot jack to up-right position.
- (B) Using jack, lower front of trailer to slightly BELOW level.
- (C) Release and lower rear body legs.
- (D) Raise front of trailer slightly ABOVE level.
- (E) Release and lower front body legs.
- (F) Lower front of trailer onto front legs. (If canopy is going to be attached refer to accessory instructions before proceeding).



1. Release front and rear road cover latches. Start to raise rear of road cover then grasp and start to pull out the rear bed. Continue to raise road cover until bed is out far enough to assume weight.

2. Pull bed out until bed lock (A) can be pulled down into position. Raise outer bed bow and lock stay braces.



3. Now, pivot bow braces up and lock to cover support bow as shown in (B). BE SURE THESE BRACES ARE IN POSITION BEFORE TRYING TO RAISE OTHER END OF COVER.

4. As with the rear bed, raise the front end of the cover and pull out the front bed. Pull front bed completely out against stops. Lower both bed legs and swing outer bed bow up and lock stay braces. Now, the first bed can be pulled out against stops and bed legs put down and adjusted.

5. Place last support bow braces in place and lock. Trailer is now ready to have tent fastened on as shown in illustration.



6. Under each bed, join the two tent flaps, at each corner, with the shock cords and hook the shock cords behind the retainers.

7. Pull the folded canvas down from the bow system. Step inside the trailer and attach the tent by inserting the hard backed edge of the canvas into the track along the lower inside edge of the road cover.

8. Opposite the door, zip the two halves of the tent together. Outside, snap sides of the tent to the trailer bow.

Accessory Instructions



1. With trailer down in travel position spread the canopy on the road cover and slide the back edge of the canopy into the poly-tube retainer, which is along front edge of the road cover. Then set trailer up as shown in set-up instructions.



2. Zip the canopy to the tent.



3. Insert longest telescoping pole into center grommet at edge of canopy. Insert pin end of peak pole into hole near top of the telescoping pole. Swing horizontal pole up into connector against metal rail of road cover.



4. Insert into brass grommet at each corner of canopy, one of remaining four telescoping poles, for height and stake ropes to ground. (The two ropes on each eave should oppose one another as shown in photo.)



5. Spread Add-A-Room or Screen Enclosure under the canopy with door in line with center canopy pole.



6. Zip Add-A-Room or Screen Enclosure to canopy and tent (Loosening the canopy ropes will assist in starting zippers.) Stake down side walls of Add-A-Room or Screen Enclosure.




7. If desired, front of Add-A-Room can be opened and extended as windbreak. Slide one piece non-telescoping pole into sleeve near door zipper. Attach rope and stake out at any desired angle. Either one or both halves can be so extended.

1966

Striking Instructions



1. Fold the side of tent just released from road cover, flat against the tent.

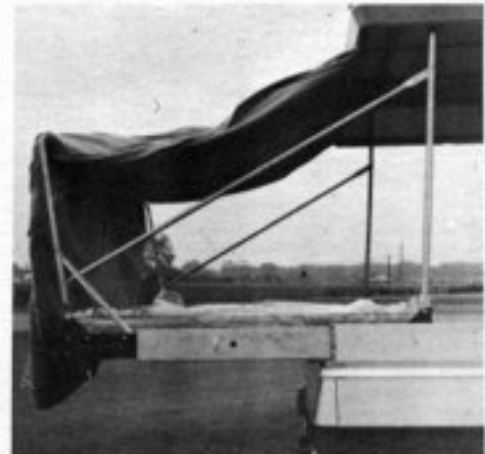

2. Held in this position grasp the lower corner of fold and swing the tent up onto bed bow.



3. Next put all 4 bed legs up and lock into Z-bar. Take support bow braces off one bow and pivot down on the bed (DO NOT UNFASTEN ALL 4 BRACES). After braces are flat on bed, break stay braces on outer bed bow and fold bow down.



4. This bed can now be pushed completely in against stop while guiding road cover onto trailer.



5. Take support tube braces loose on last bed and fold down on bed. Break stay braces on outer bed bow and fold bow down onto trailer. Last bed can now be pushed all the way in against stop while easing cover onto trailer. Fasten front and rear road cover latch.



6. (If trailer is equipped with a tongue jack, reverse body leveling leg set-up instruction.) If not tongue jack equipped, release rear legs by lifting at body corner and pressing locking lever from notches. Tilt trailer or attach to car to assist in folding front legs. (Be sure leg retainers lock).